



Parameter menu UVR61-3

Vers. 9.5


Display after switching on

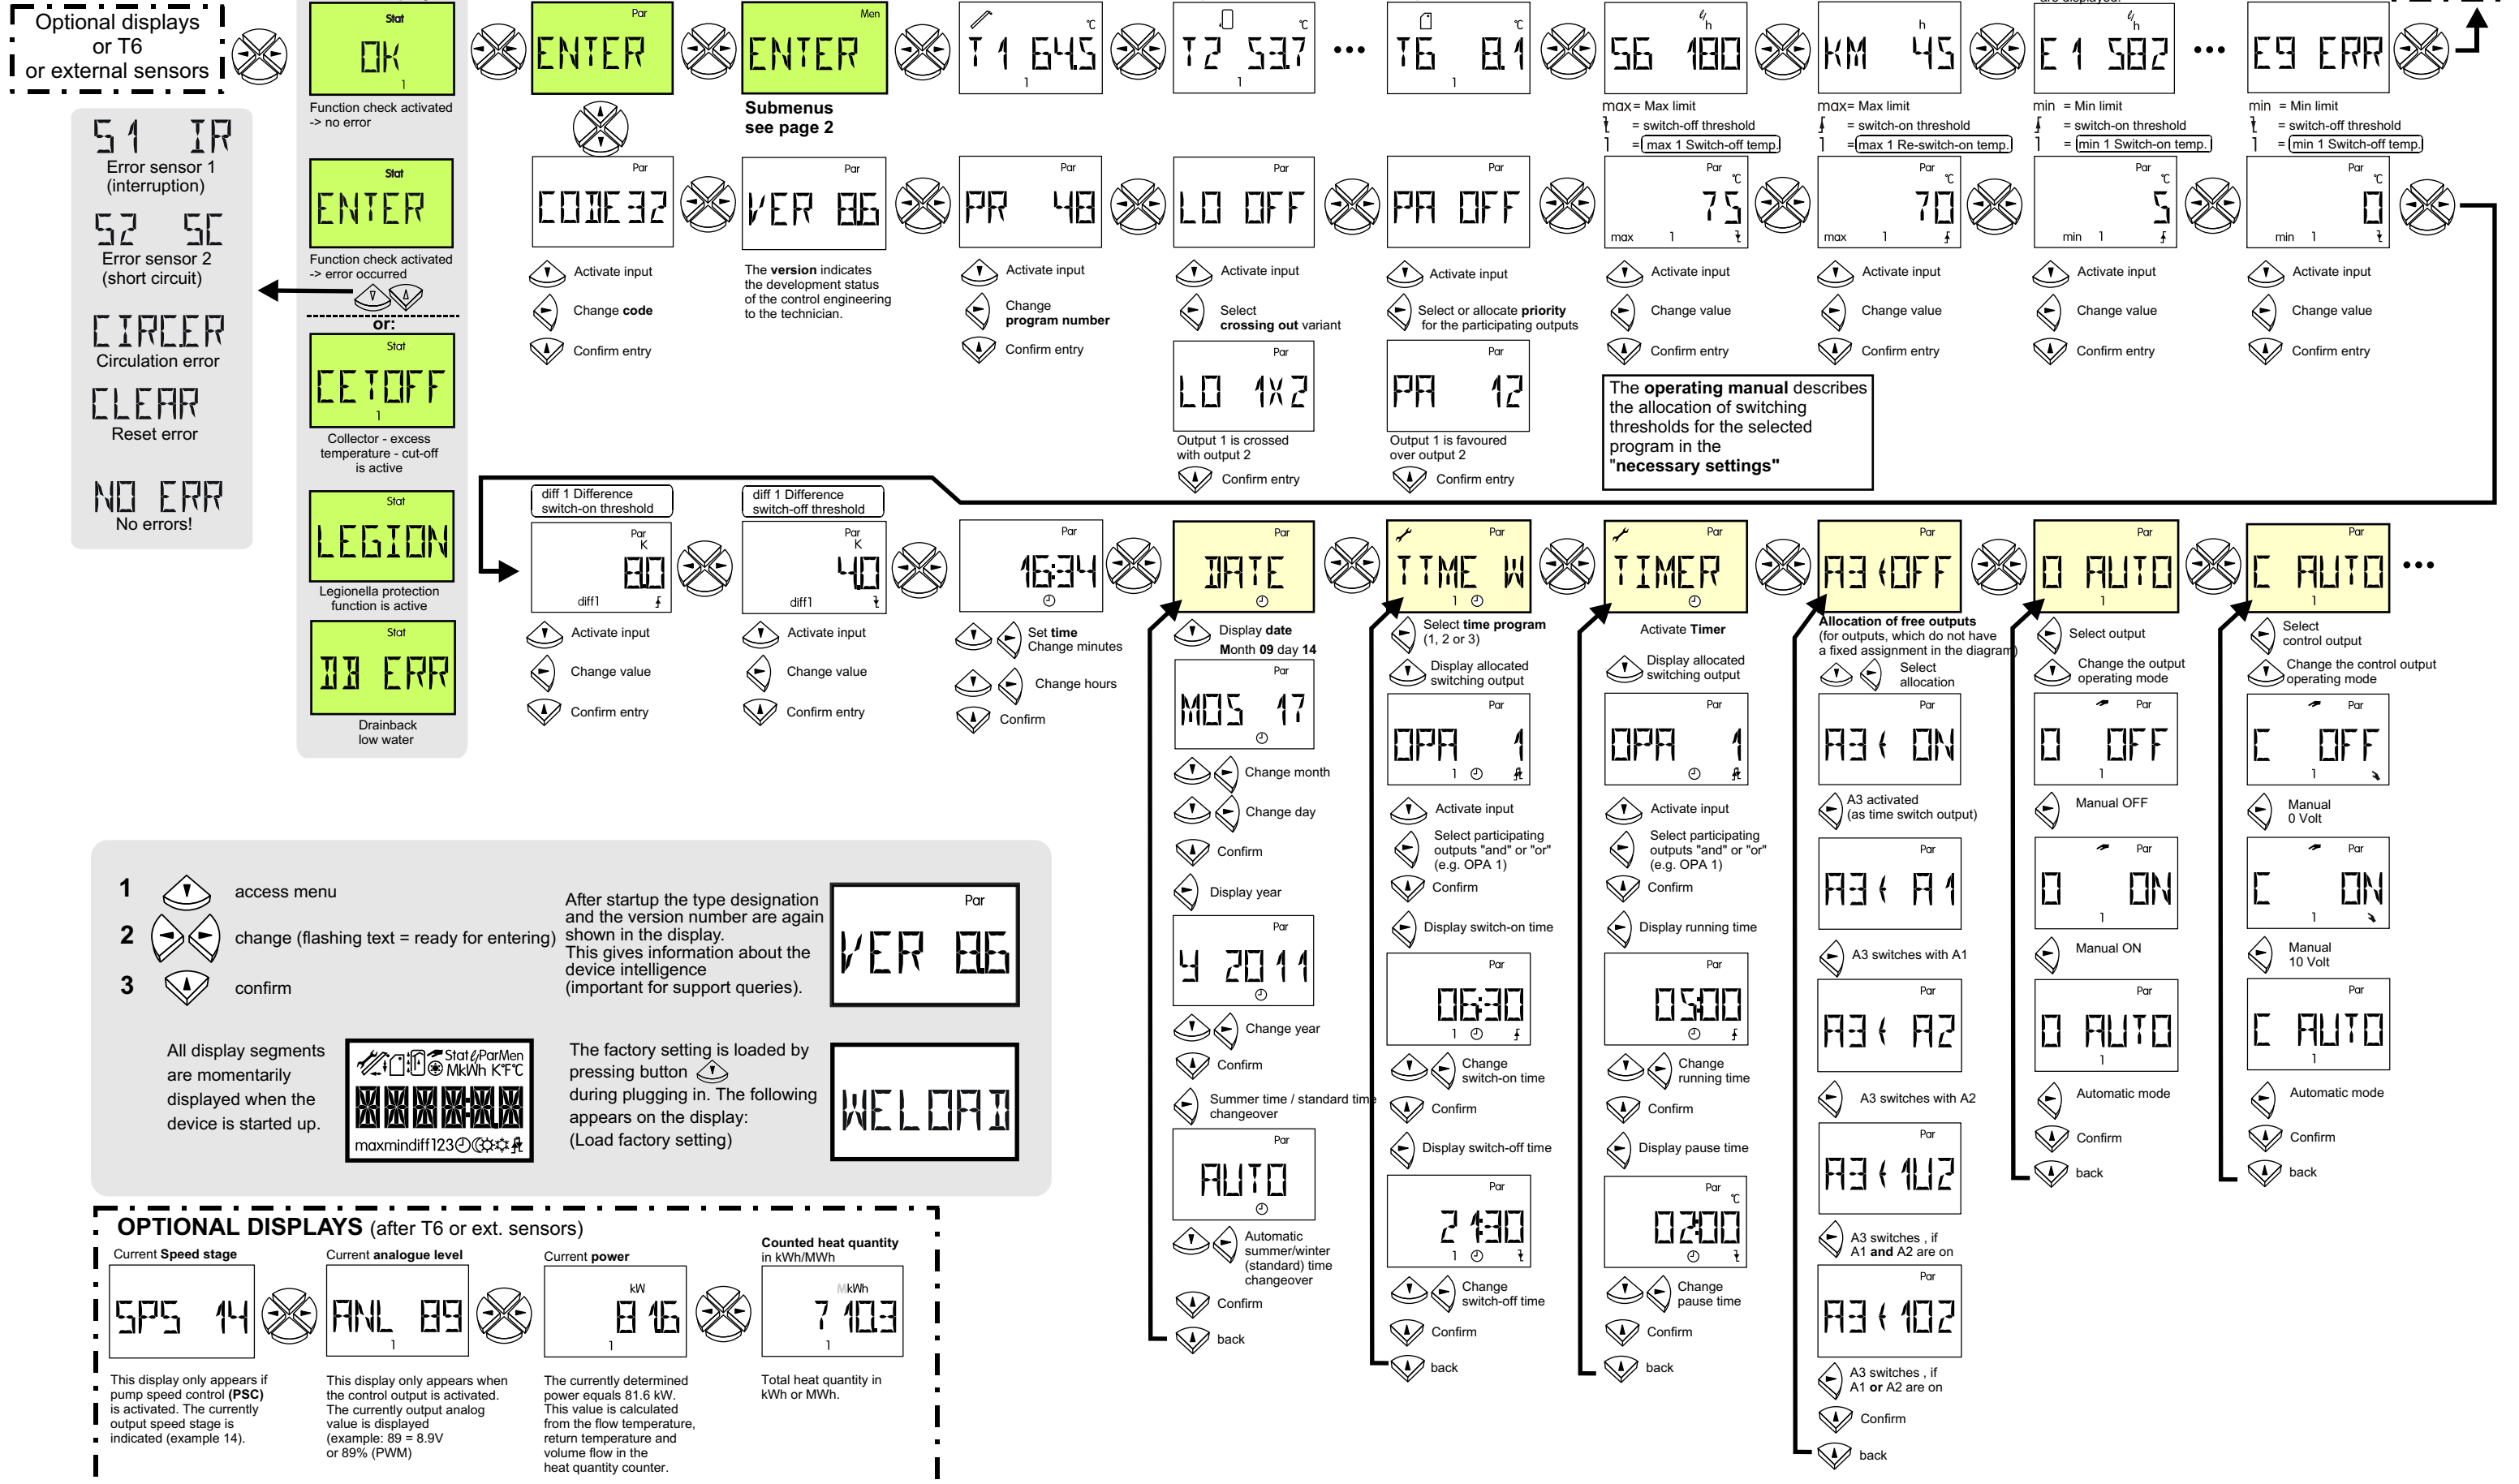


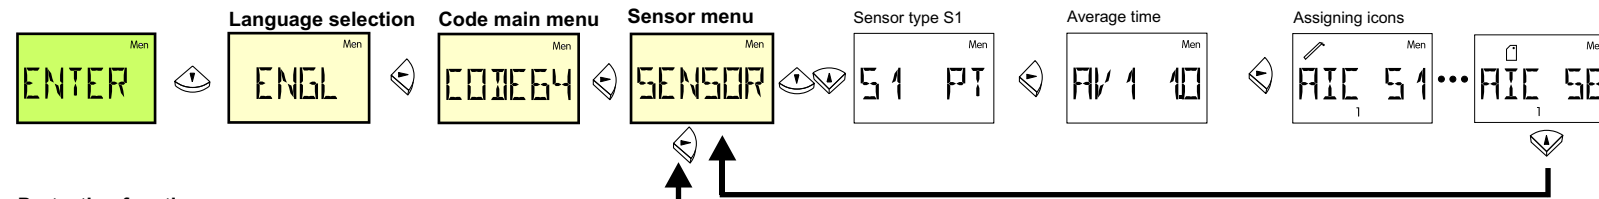

Setting options:
 KTY = semiconductor sensor
 PT = PT 1000 sensor
 GBS = radiation sensor
 <25 = fixed value 25°C
 <S1 = sensor value acceptance
 DIG = digital input
 OFF = sensor OFF

S6 only:
 VSG = volume flow encoder (pulse)
 if VSG => LPI (litres/pulse)
 WS = wind sensor

The following symbols are available for the sensor position:
 123
 Symbol allocation has no influence on the control function.

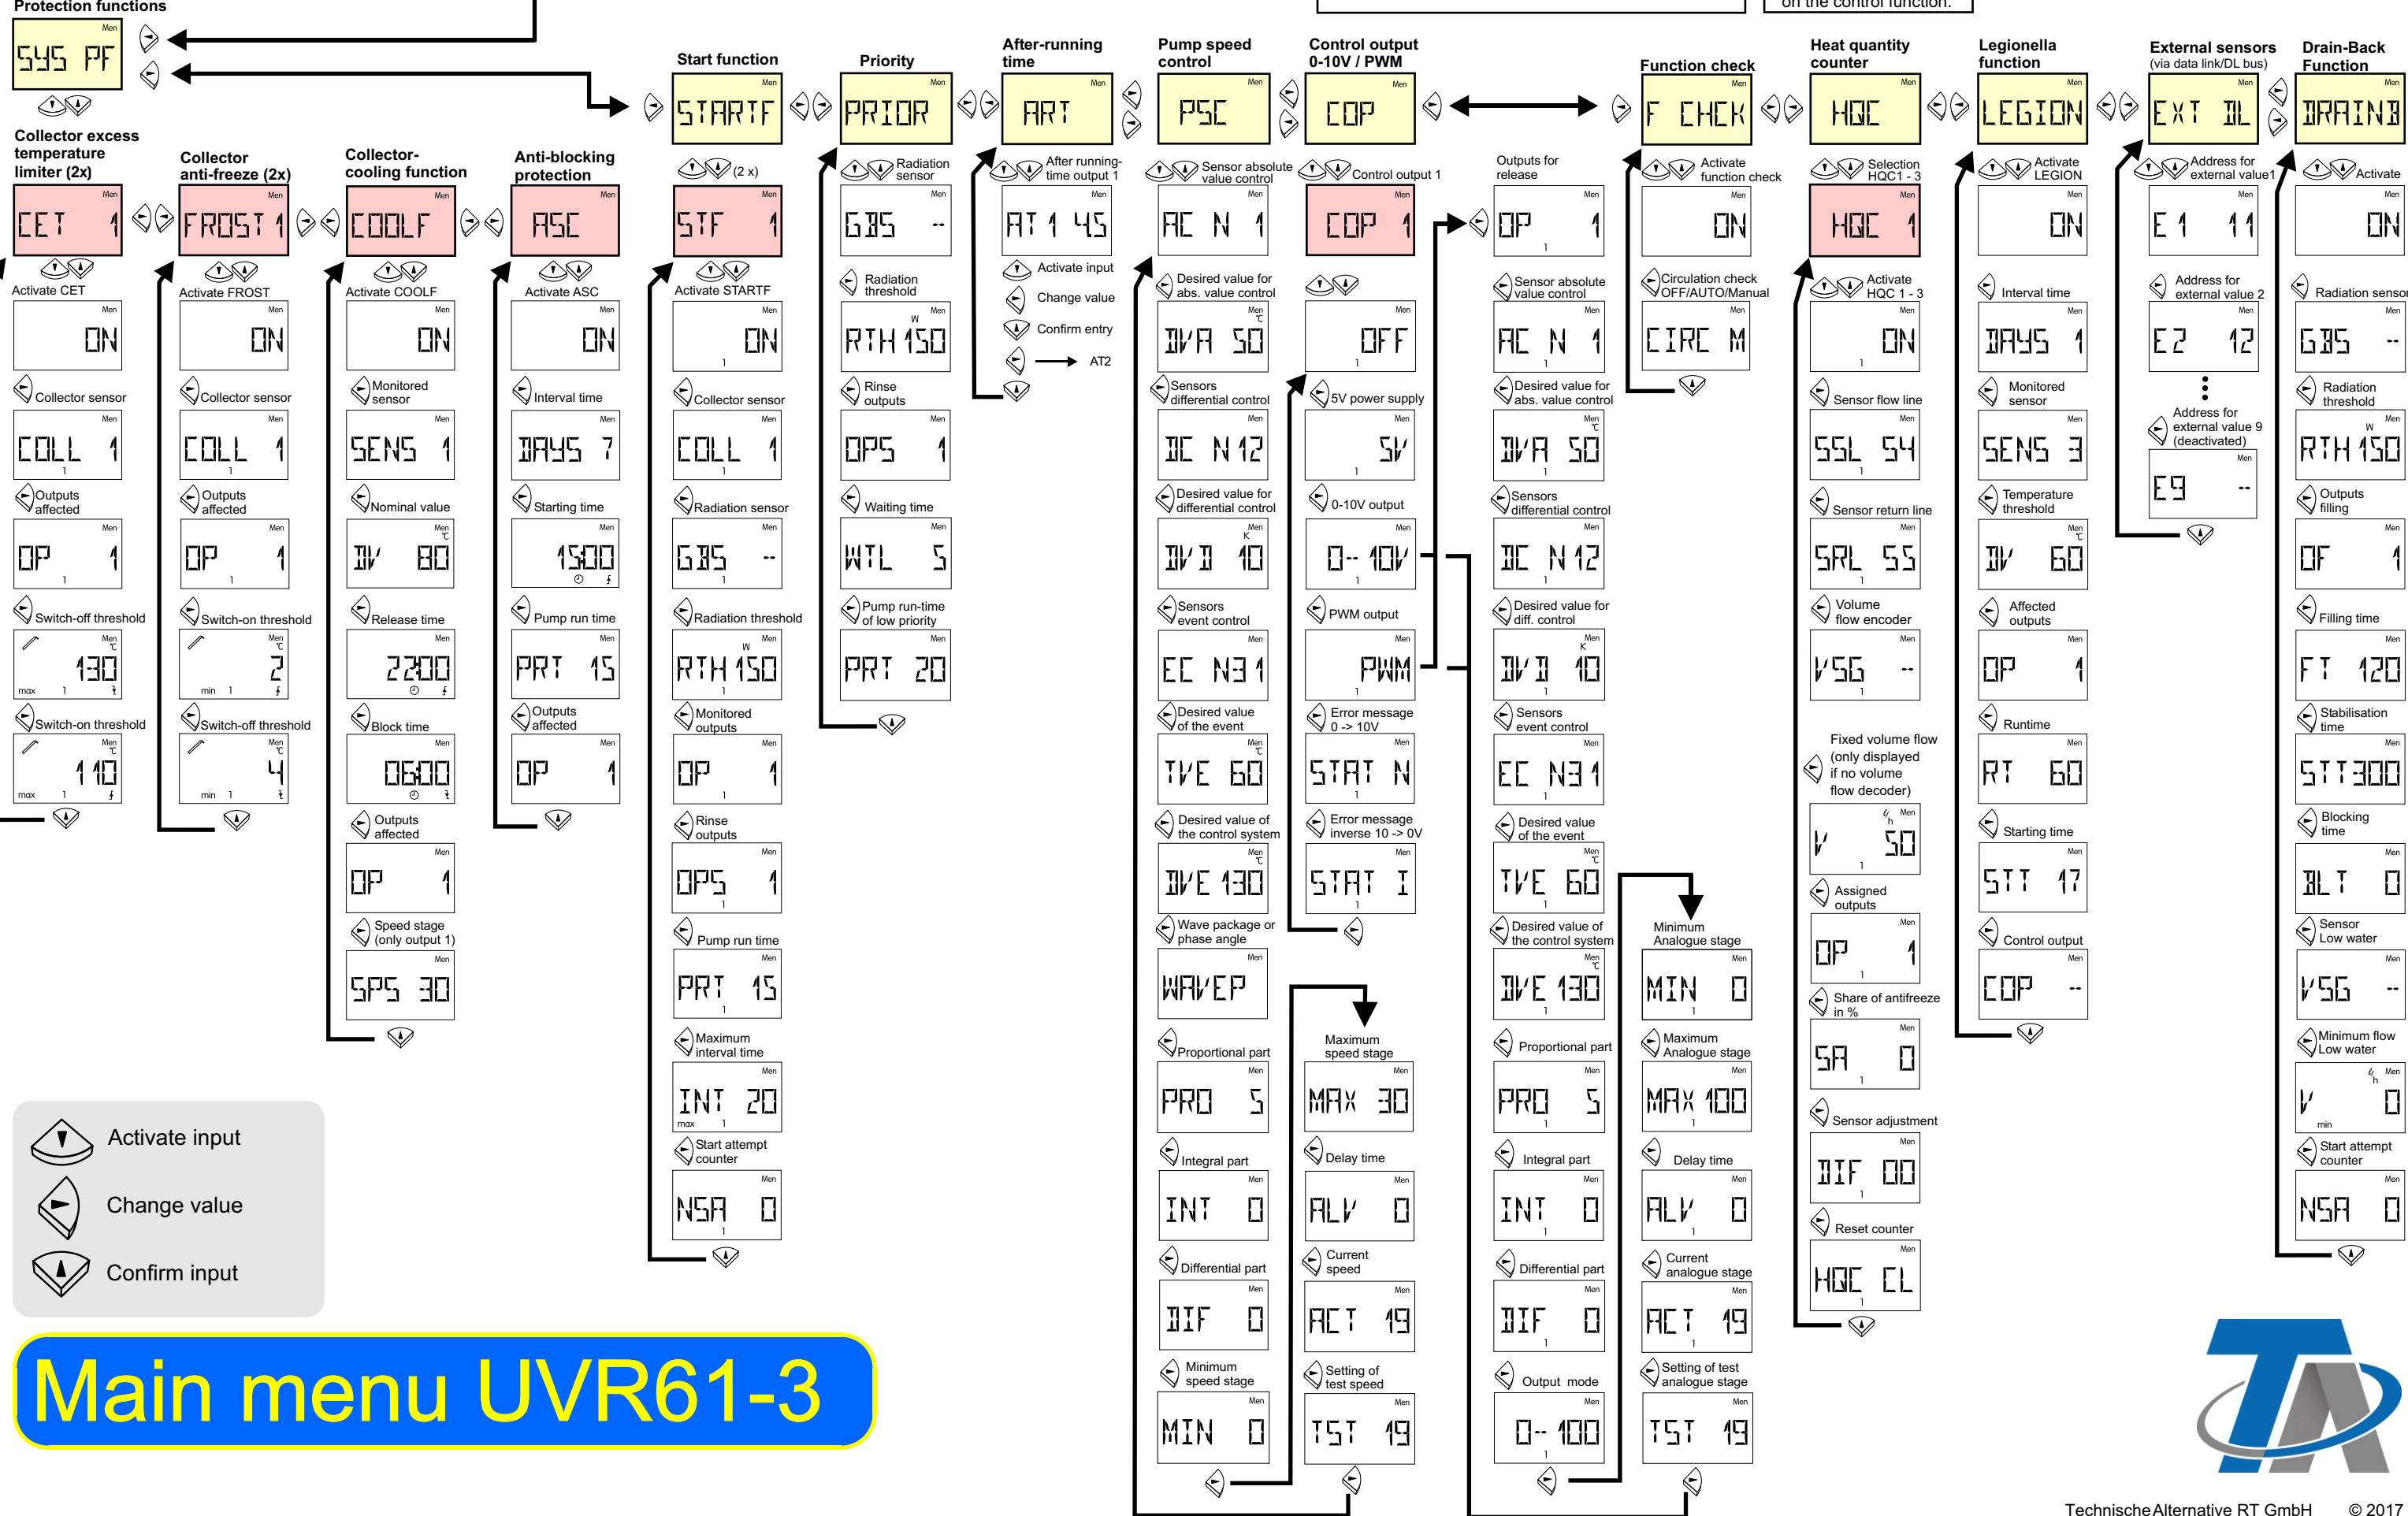

Main menu UVR61-3

