




## Auxiliary relay for CAN bus devices

For use with UVR16x2K, UVR16x2S

Example: Connection for outputs 14 and 15

Program both outputs A14 and A15 as switching outputs.

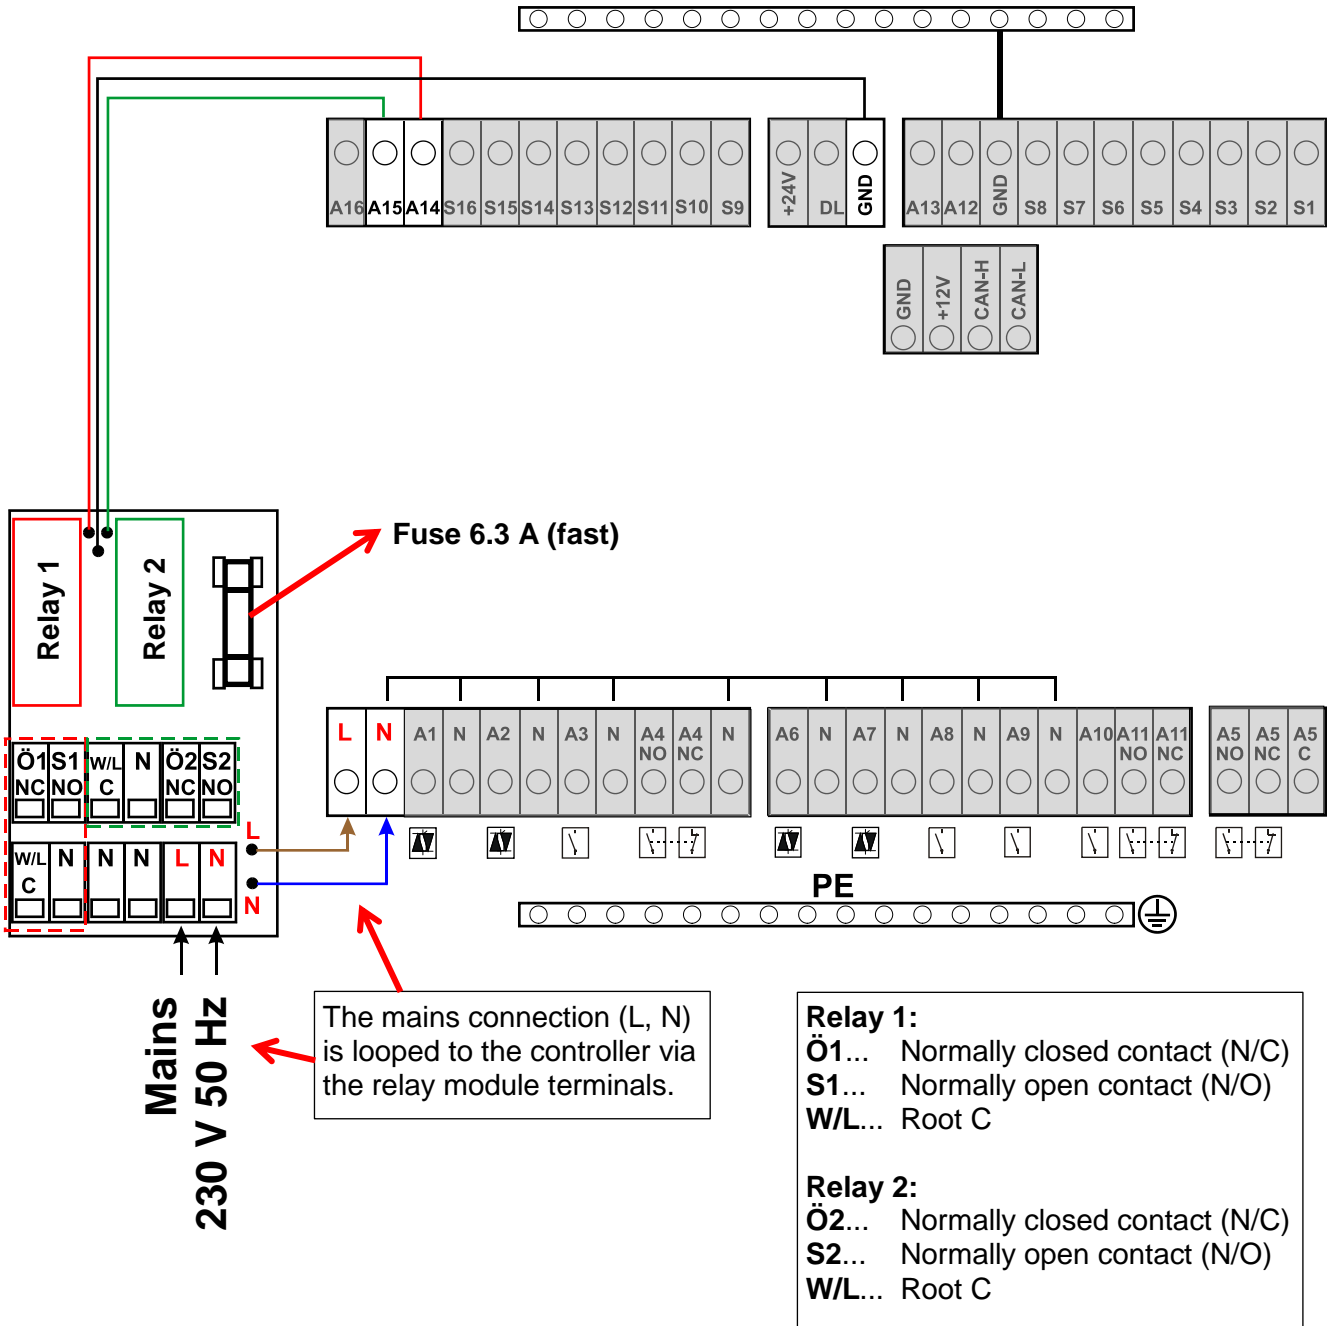


The relay module can be connected to any two outputs between A12 and A16 if these have been programmed as switching outputs.


# For use with UVR1611K-N, UVR1611S-N

## Example: Connection HIREL-PF for outputs 12 and 13

Program outputs A12 and A13 as switching outputs.

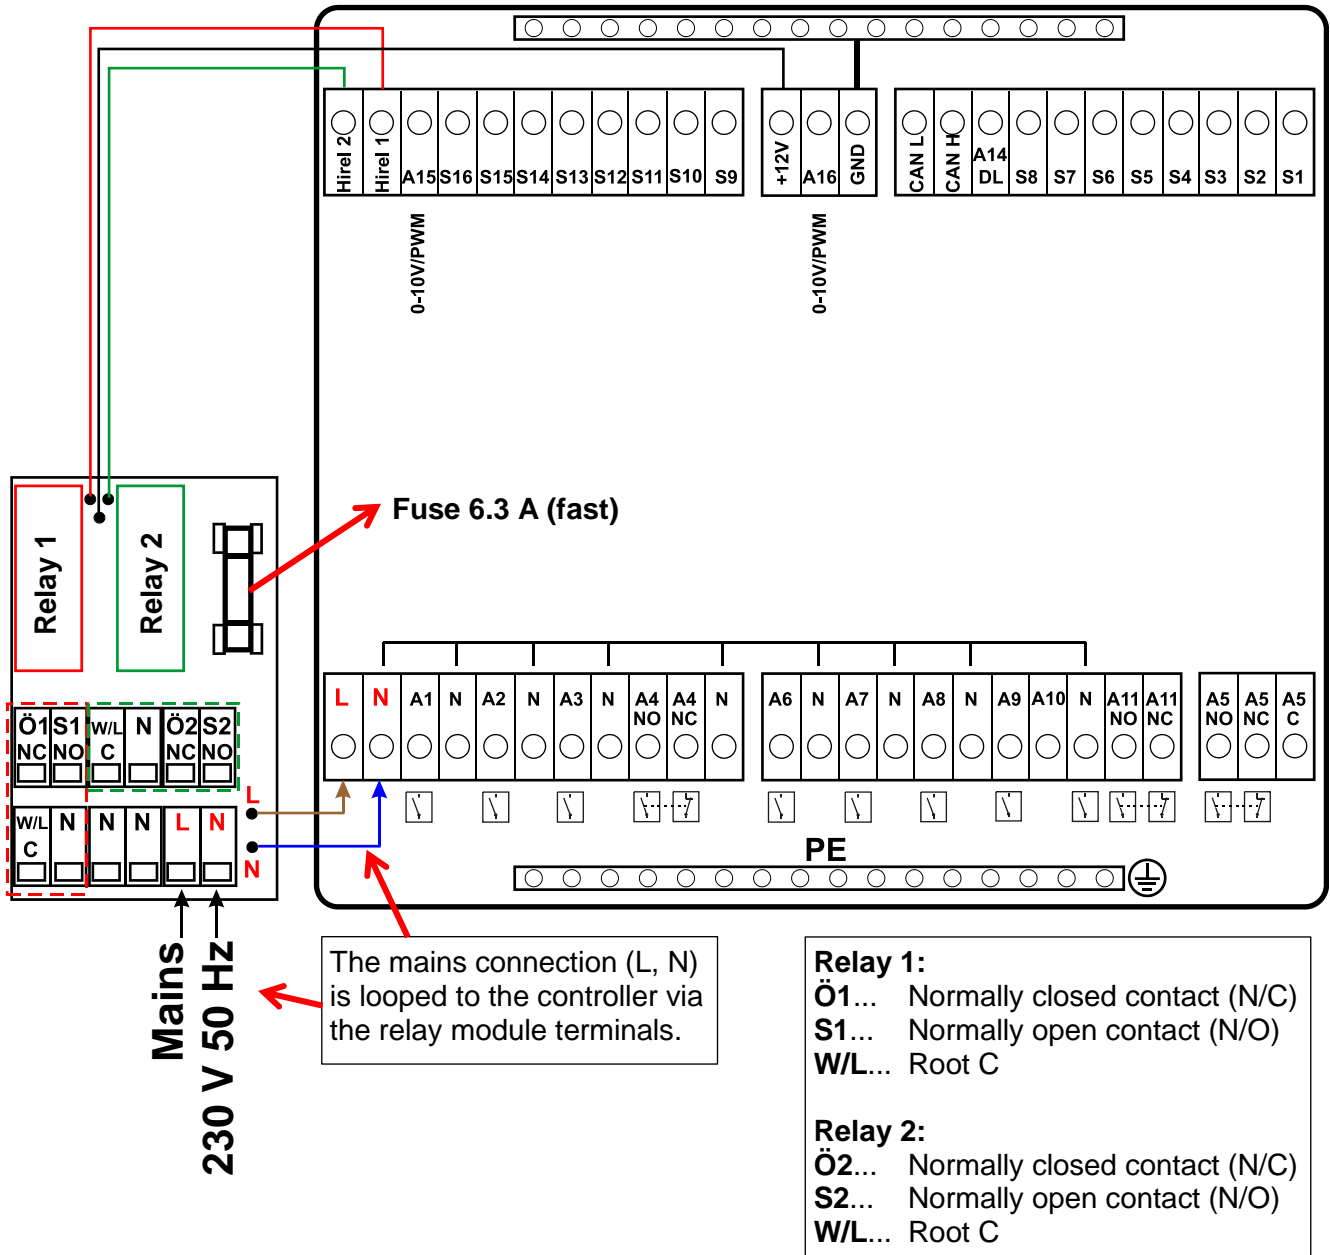

### Relay wiring diagram

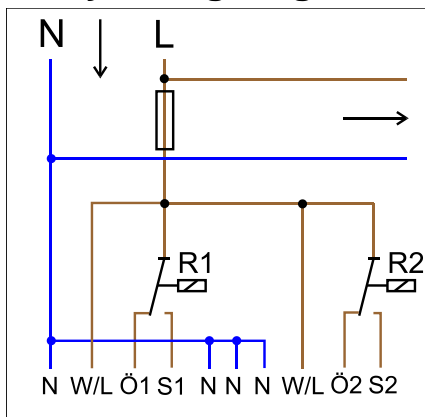

Both relay outputs are protected by the fuse on the relay module. Terminal "W" therefore corresponds to phase conductor "L".

If the fuse is removed, both outputs will be potential-free whilst remaining connected to one another via root "W".

**Max. switching capacity: 230V/3A**

Subject to technical modifications

