


# AI5-DL

## INPUT EXTENSION

Version 1.02

---

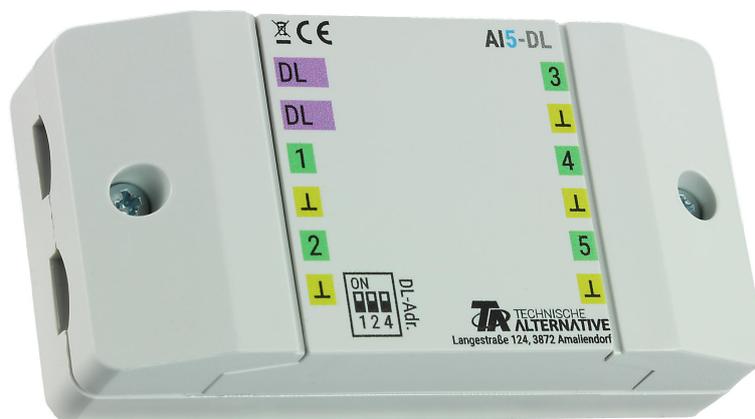


Mode of operation  
Programming

The AI5-DL (= „Analogue Input“) translates signals for the data link (DL bus). These can originate from up to 5 different external 0-10 V sources. It is recommended, that the 0-10V sensors that are being evaluated be connected to the same controller as the AI5-DL itself. It is recommended that the 0-10 V sensors that are being read out and the AI5-DL be supplied with power from the same controller.

## Electrical Connection

**Example:** Connection to a UVR16x2 controller

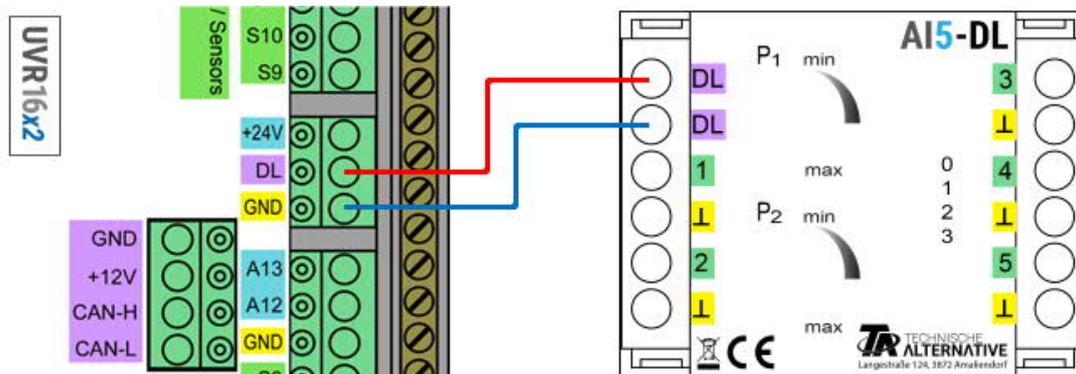

The principles of DL bus cabling are described extensively in the installation instructions for the freely programmable controllers. The polarity of the data link is interchangeable.

## Index

The AI5-DL forwards values to the data link via 12 indices. These are measured via the inputs.

Index	Unit	Source	
1	Volt	External sensor	Channel 1
2	Volt	External sensor	Channel 2
3	Volt	External sensor	Channel 3
4	Volt	External sensor	Channel 4
5	Volt	External sensor	Channel 5
6	Percent	Potentiometer*	-
7	Percent	Potentiometer*	-
8	Dimensionless	DIP-switch*	-
9	Dimensionless	Button*	-
10	Dimensionless	Button*	-
11	Dimensionless/Flip-Flop	Button*	-
12	Dimensionless/Flip-Flop	Button*	-
13	Not relevant for AI5-DL		
14	Dimensionless	Serial number of the module	
15	Dimensionless	Software version (without decimal points)	

\*Button, DIP switch and potentiometer only on versions AI5S-DL and AI5T-DL.

## DL address

The AI5-DL has a default address of 1. This address can be changed using the DIP switches in the device. The final address is made up of the default 1 and the sum of the DIP switches that are switched to „ON“.

### Example



Desired address	<b>6</b>
Default setting	1
Dip-switches 1 and 4	+ 5
Sum = Address	<b>= 6</b>
DIP switches <b>1</b> and <b>4</b> must be set to <b>ON</b> .	



Position of DIP switches acc. to example.

## Programming in TAPPS2

In the following examples, the default DL bus address of 1 is used.

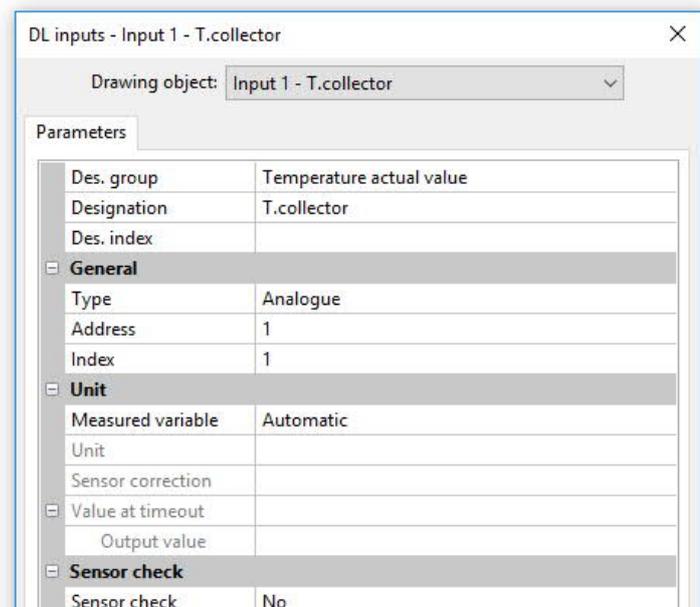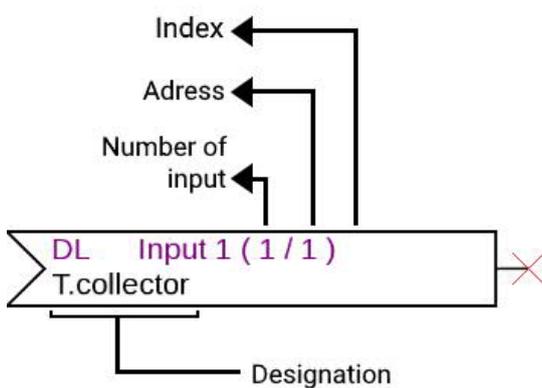


The most important settings can be found under **General**. Here state the DL bus address (WE = 1) set on the AI5-DL as well as the index of the desired value.

If the **Measured variable** is set to **Automatic**, it is not possible to perform any further settings under **Unit**.

The table found under **Index** (page 2) provides information about which index outputs which value with which measured variable.

On this model, Indices **6-12** are surplus to requirements, as the device does not have any buttons, DIP switches or potentiometers.

## Dimensions in mm

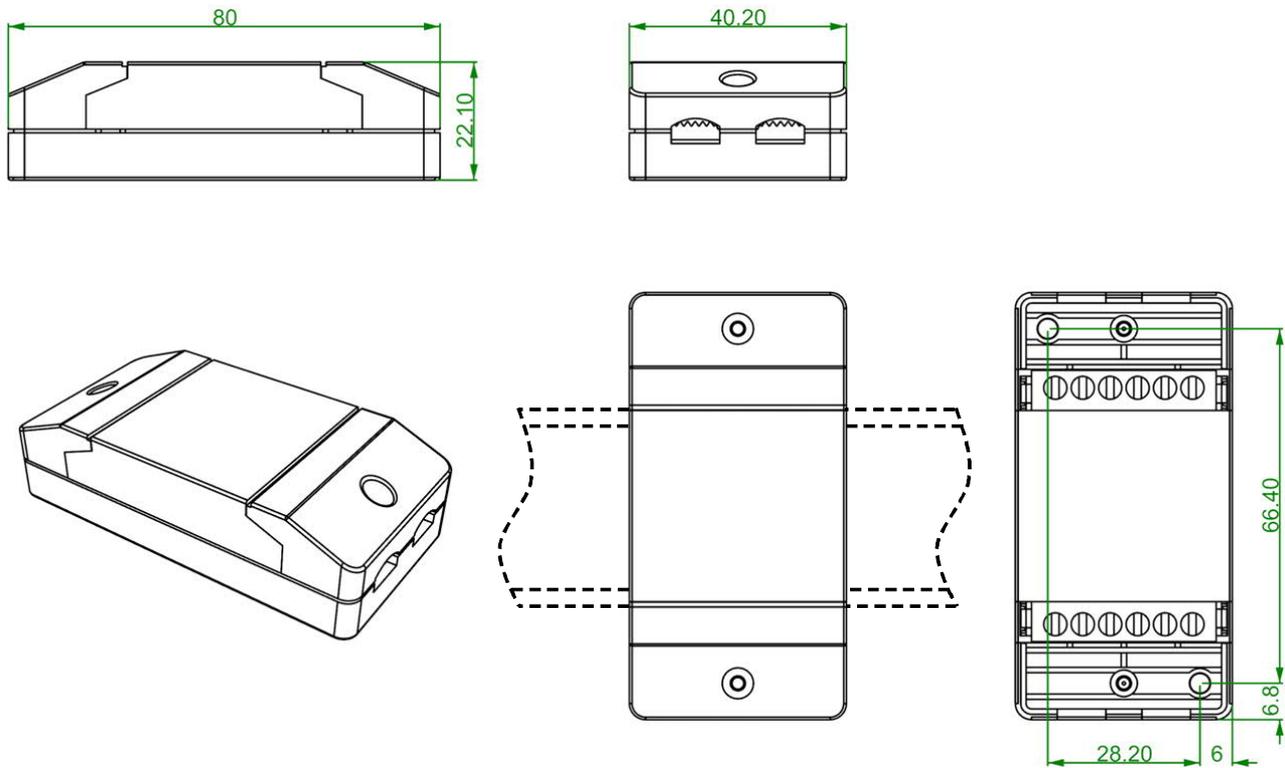

Top-hat rail installation  
(support rail TS35 to  
standard EN 50022)

Technical Data	
DL bus load	15%
IP rating	IP40
Terminal	max. 1,5 mm <sup>2</sup>
Max. ambient temperature	45 °C
Input voltage range	0-10 V

Subject to technical modifications.

©2018