


Parameter menu ESR 31 Vers. 3.4

Display after switching on



Optional displays or T3 or external sensors

Optional Displays

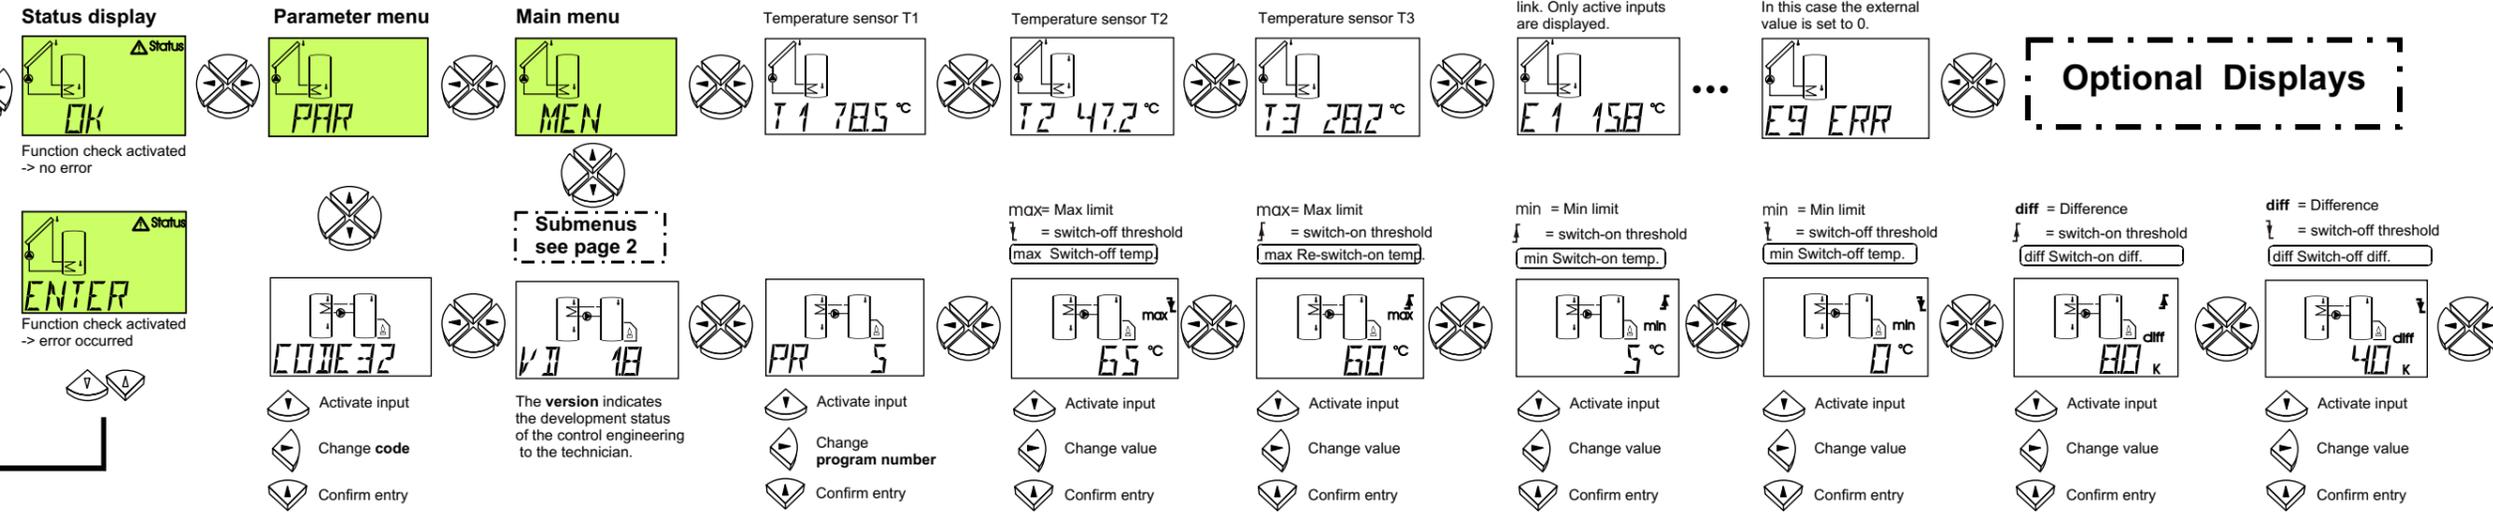

CETOFF
 Collector - excess temperature - cut-off is active

CIRCEP
 Circulation error only displayed when activated

NO ERR
 No errors!

S1 IR
 Error sensor 1 (interruption)

S2 SC
 Error sensor 2 (short circuit)


CLEAR
 Reset error

The operating manual describes the allocation of switching thresholds for the selected program in the "necessary settings"

1 access menu
 2 change (flashing text = ready for entering)
 3 confirm

After startup the type designation and the version number are again shown in the display. This gives information about the device intelligence (important for support queries).

The factory setting is loaded by pressing button during plugging in. The following appears on the display: (Load factory setting)

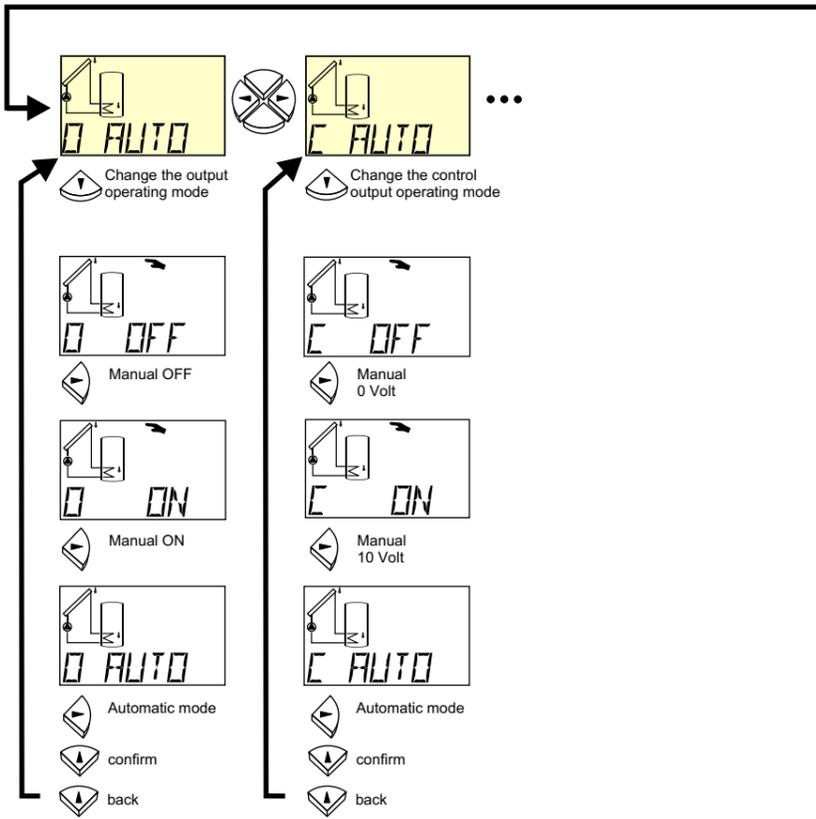

OPTIONAL DISPLAYS (after T3 or ext. sensors)


 
Current Speed stage
 SPS 14: This display only appears if pump speed control (PSC) is activated. The currently output speed stage is indicated (example 14).

Current Analogue stage
 ANL 4.3: This display only appears when the control output is activated. The currently output analog value is displayed (example: 4.3 = 4.3V or 43% (PWM)).

Current Power
 10.2 kW: The currently determined power equals 10.2 kW. This value is calculated from the flow temperature, return temperature and volume flow in the heat quantity counter.

Counted heat quantity in MWh
 3.9 MWh: Total heat quantity in MWh.

Counted heat quantity in kWh
 26.1 kWh: Total heat quantity in kWh.

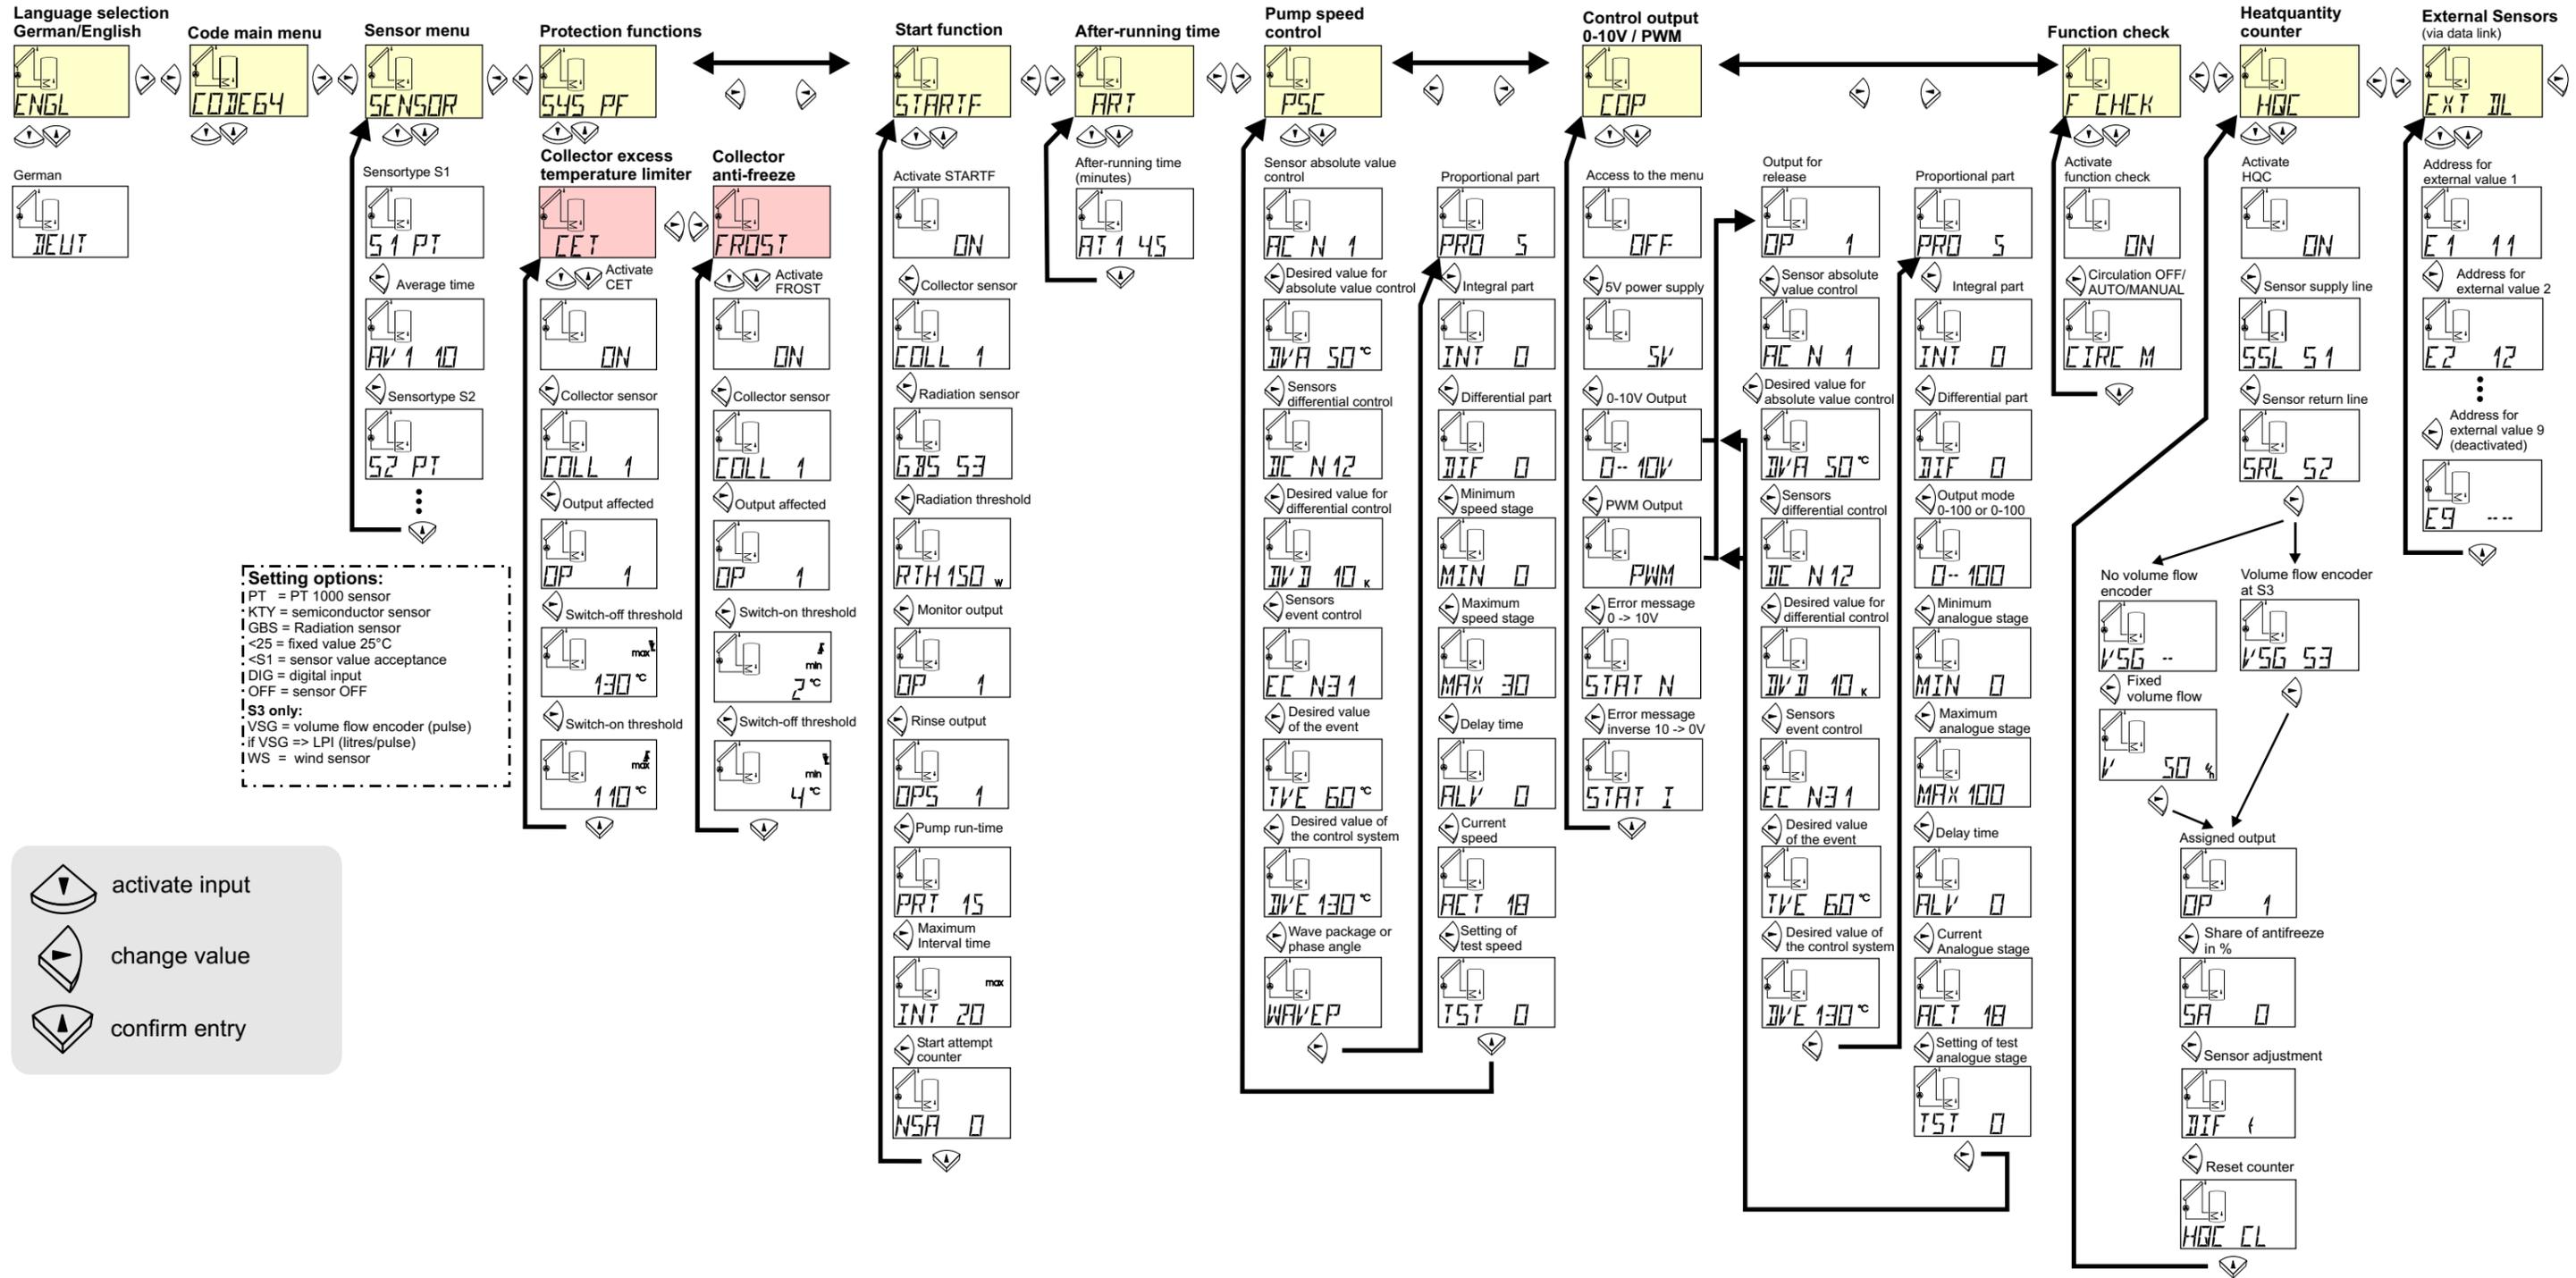

Main menu ESR 31

